




# Exploded view and service parts list

## Chapter 20 Exploded view and service parts list

### 1-1. R-Room Left Door Part


1. Model : GR-A24FDMMB

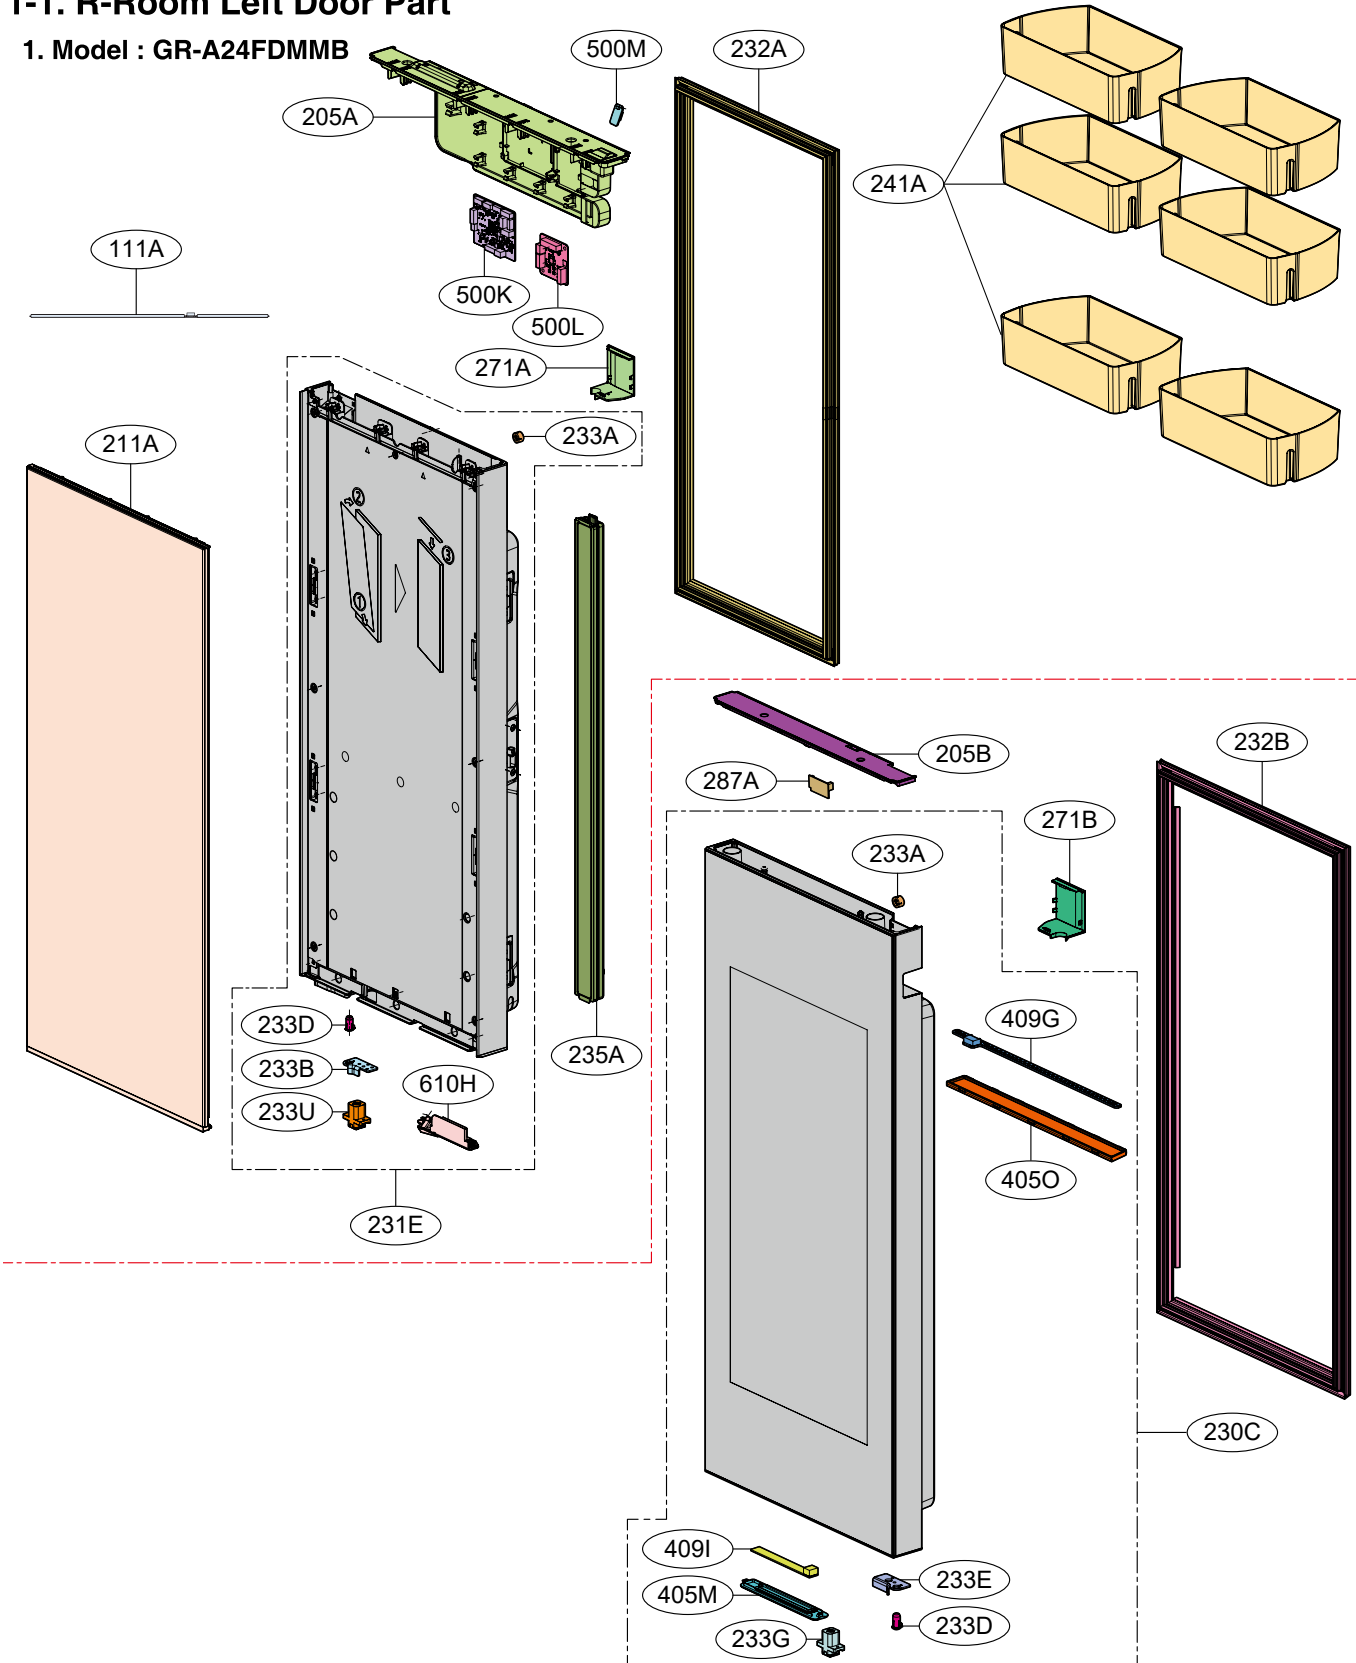



# Exploded view and service parts list

## 2. F-Room Door Part

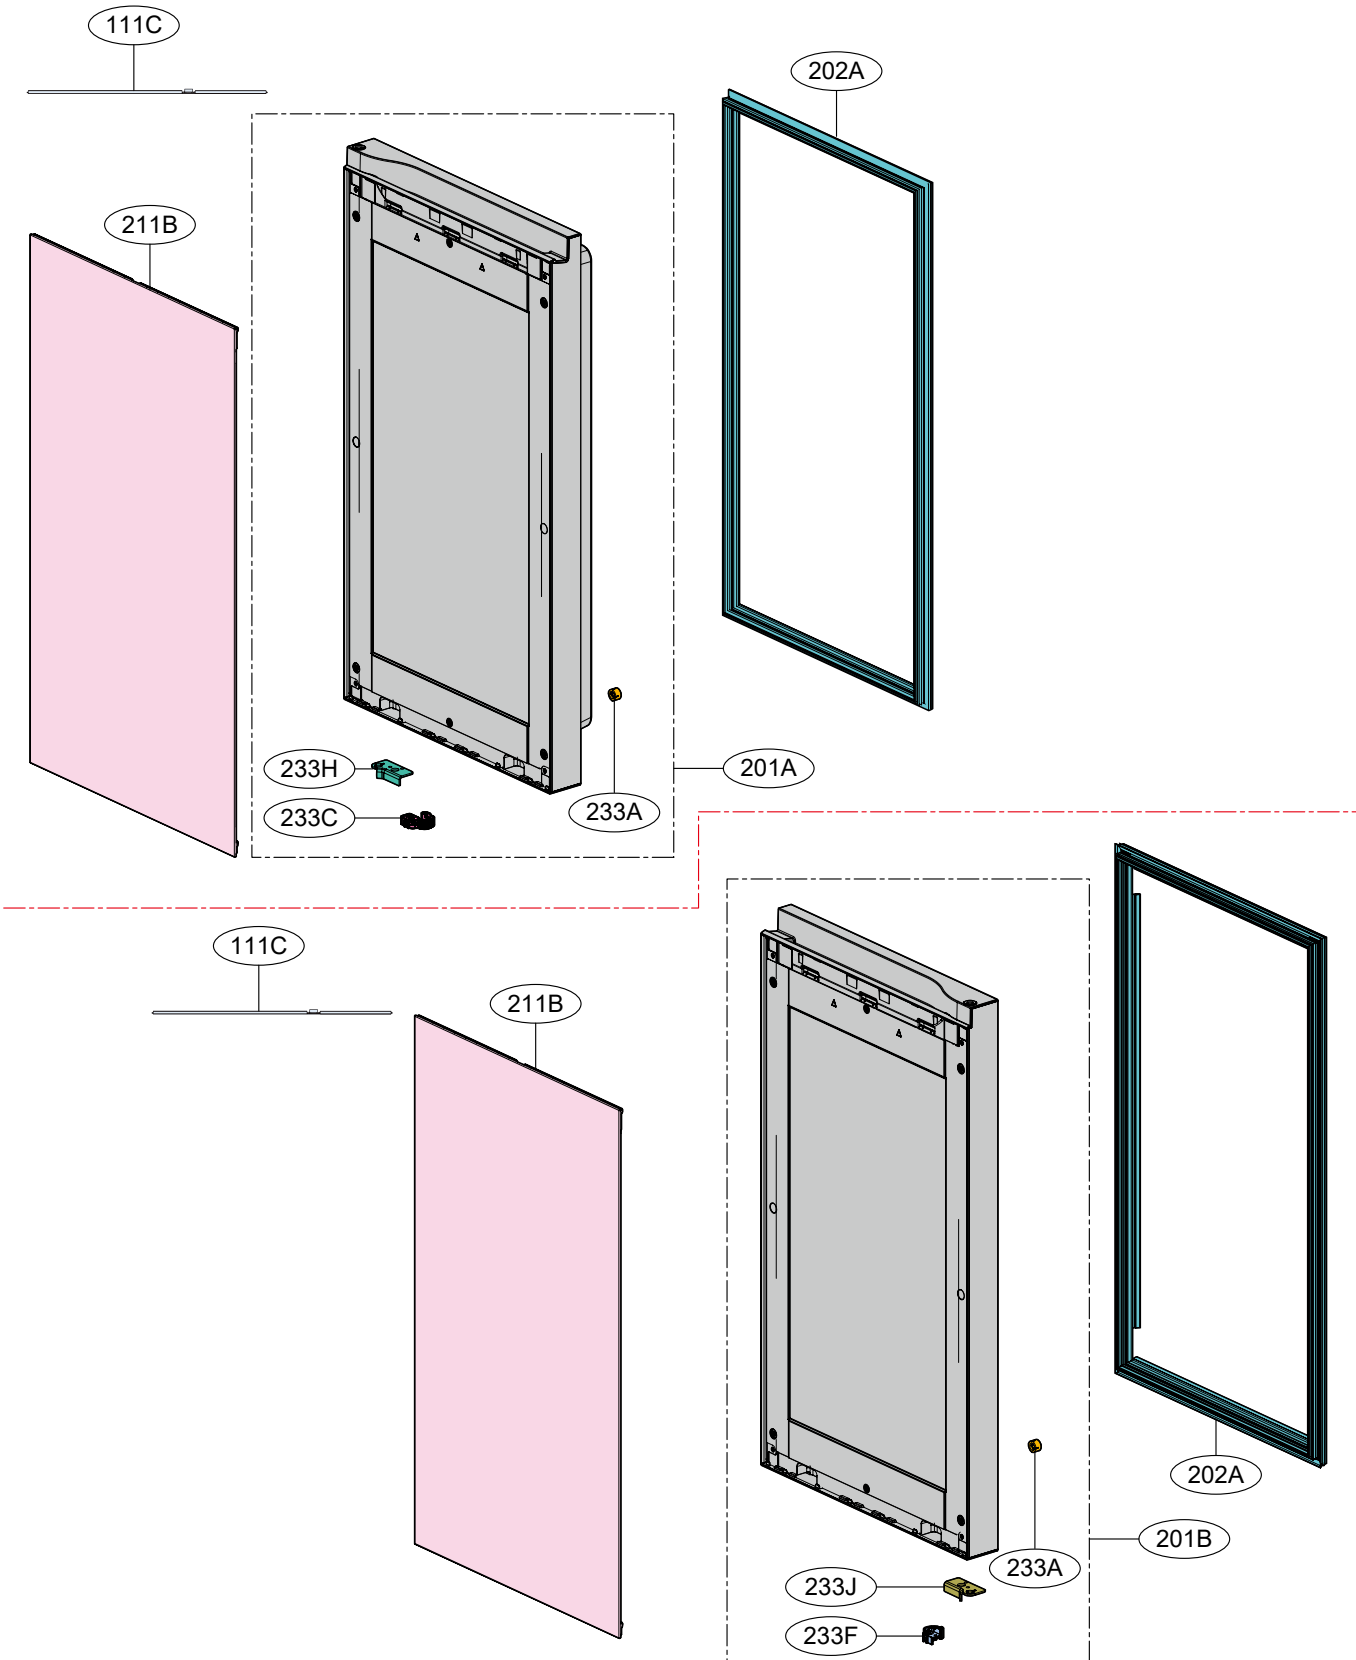




# Exploded view and service parts list

## 3. Case Parts

### 1. Model : GR-A24FDMMB

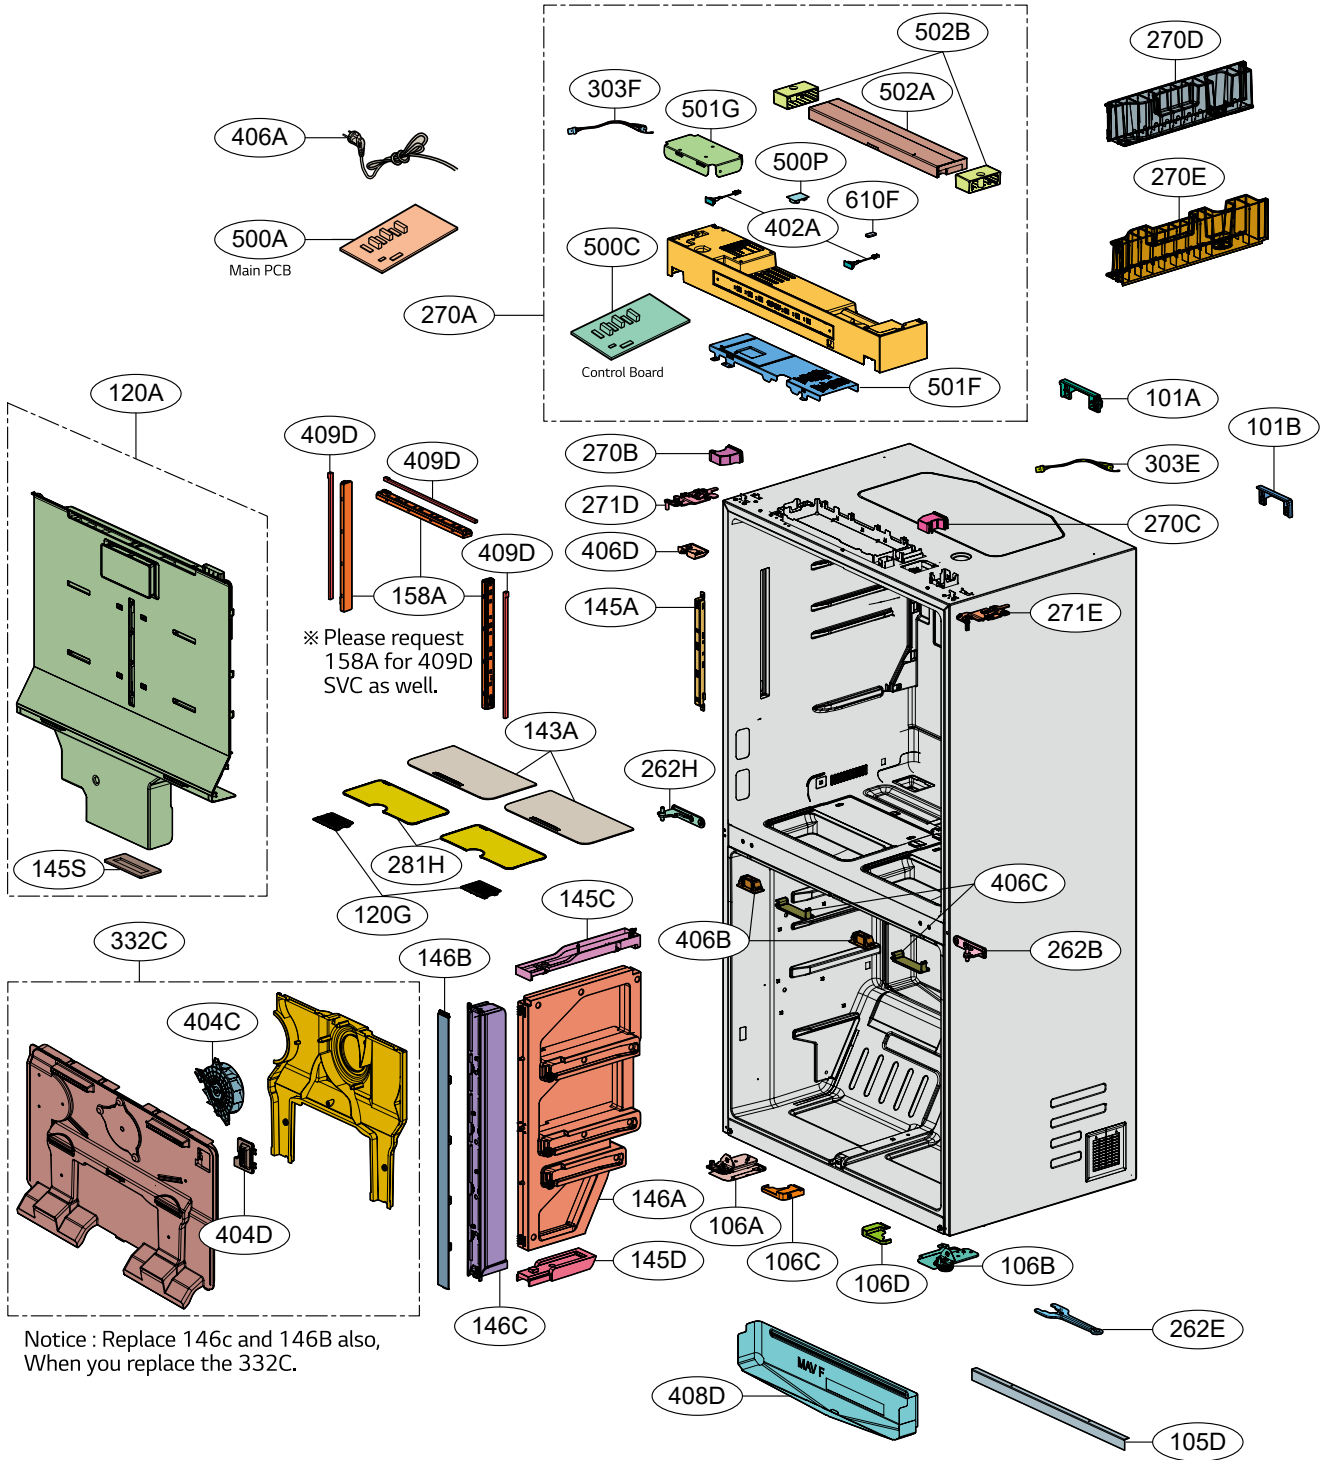


Notice : Replace 146c and 146B also,  
When you replace the 332C.



# Exploded view and service parts list

## 3. Case Parts (Cycle parts)


### 1. Model : GR-A24FDMMB

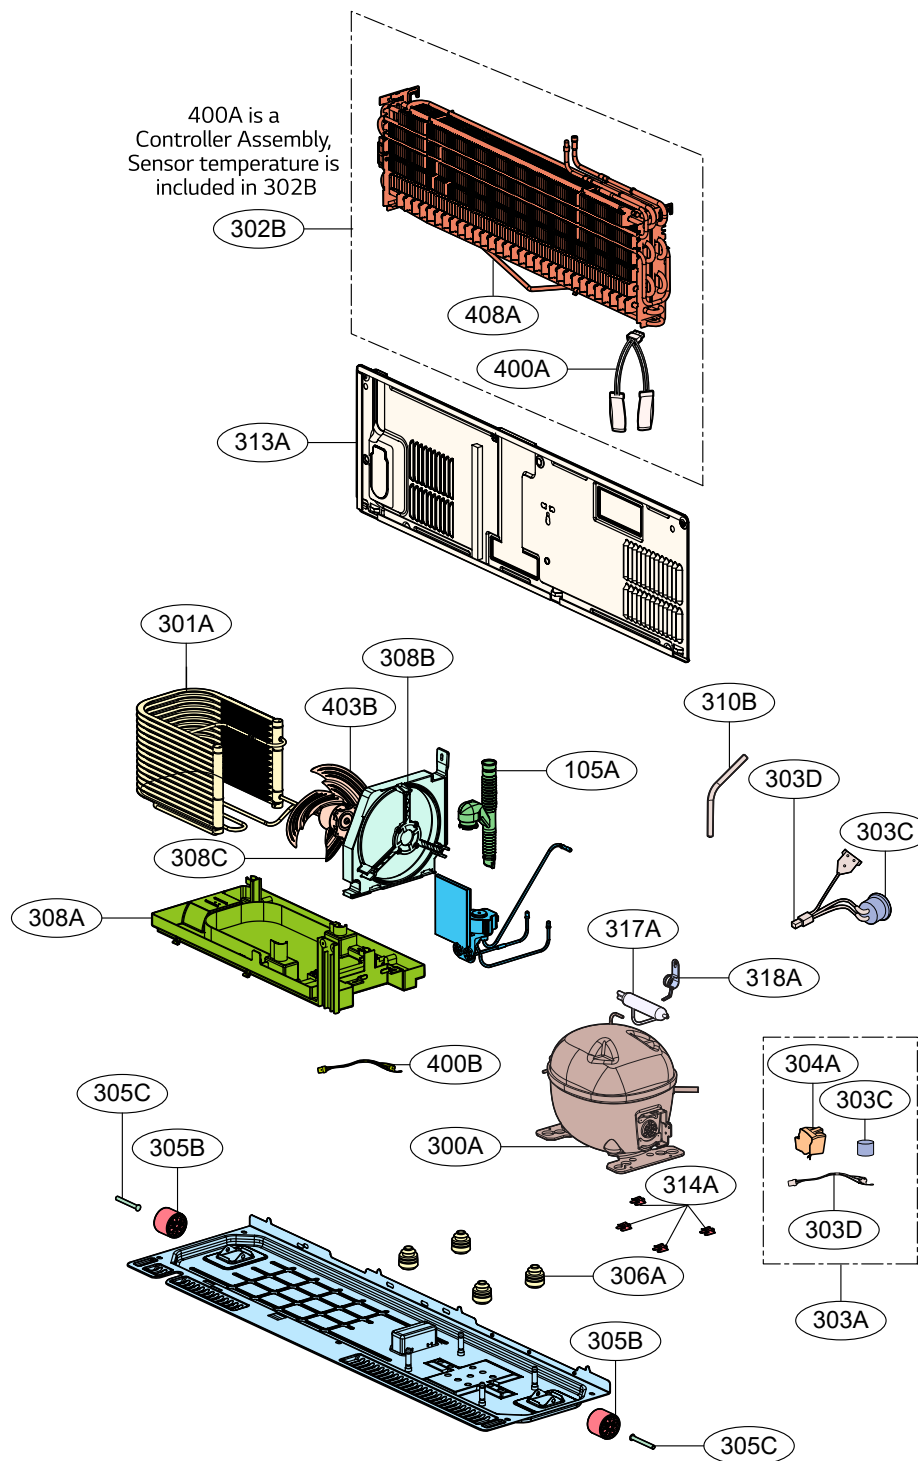



# Exploded view and service parts list

## 4. Drawers and Vegetable Room Part

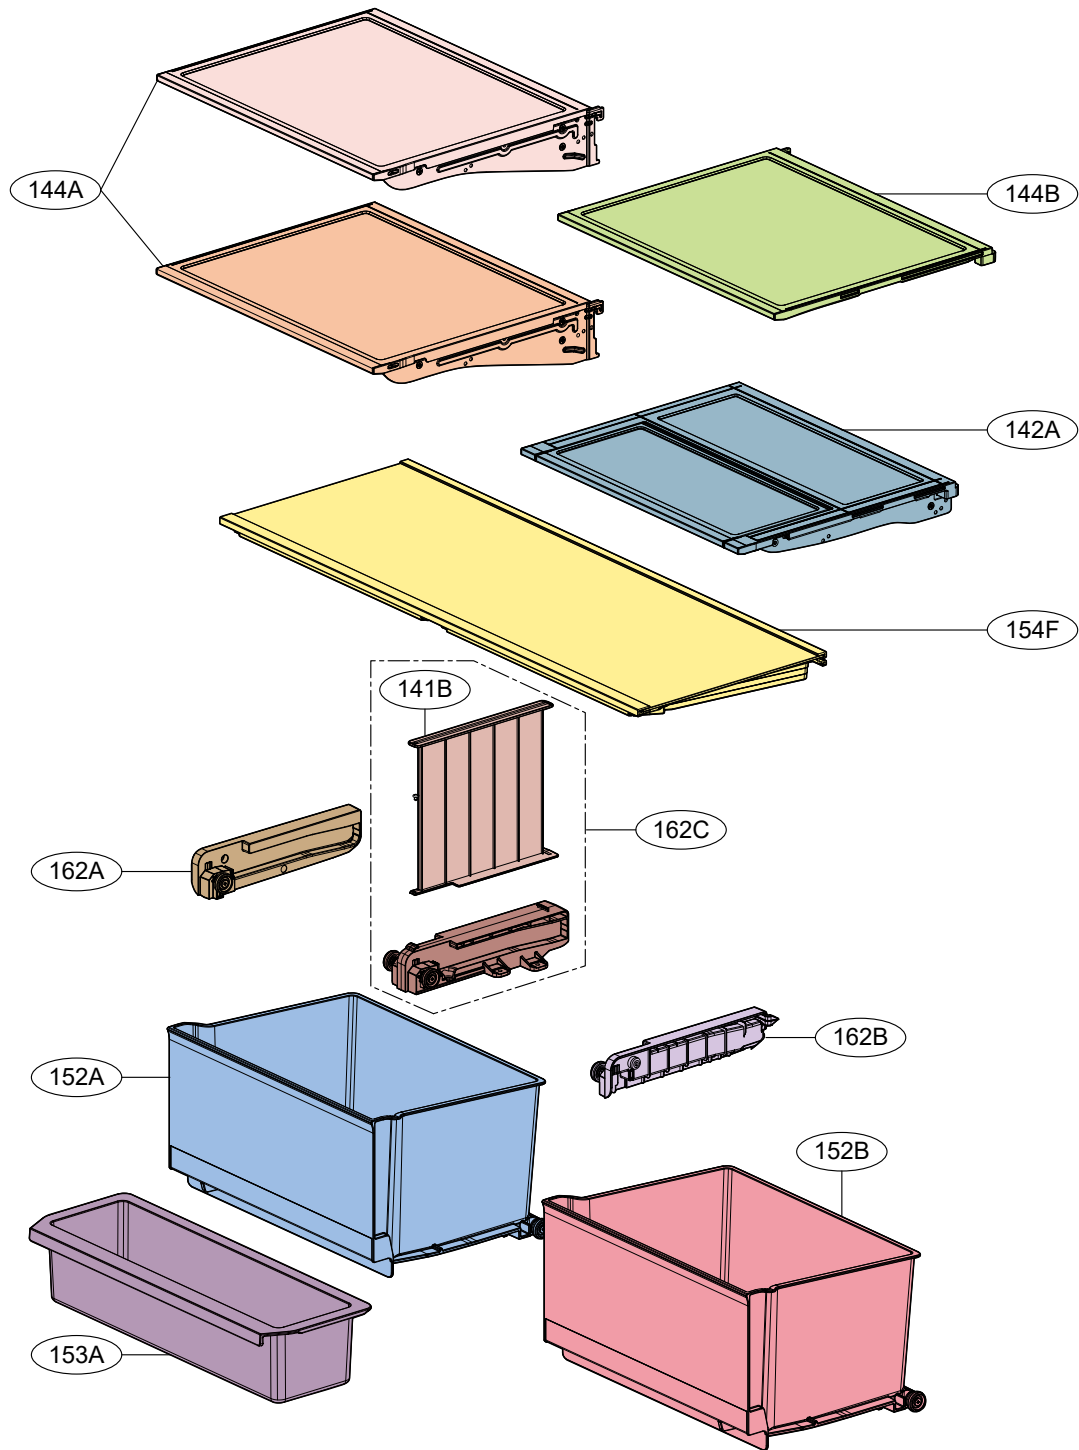



# Exploded view and service parts list

## 5. F-Room Drawer Part

